



# Dell OptiPlex GX260 Motherboard Replacement

This guide will show you how to remove the Dell OptiPlex GX260 motherboard.

Written By: Kevin Schapansky





## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-




## Step 1 — Case



- Lay the Dell Optiplex GX260 down on a clean flat surface with the rear towards you.
  - Push the oval shaped buttons located on the top and bottom of the PC simultaneously and lift the case straight up.
- i** Note: Some force may be required to push in the oval buttons open the PC case.


## Step 2 — Main Fan

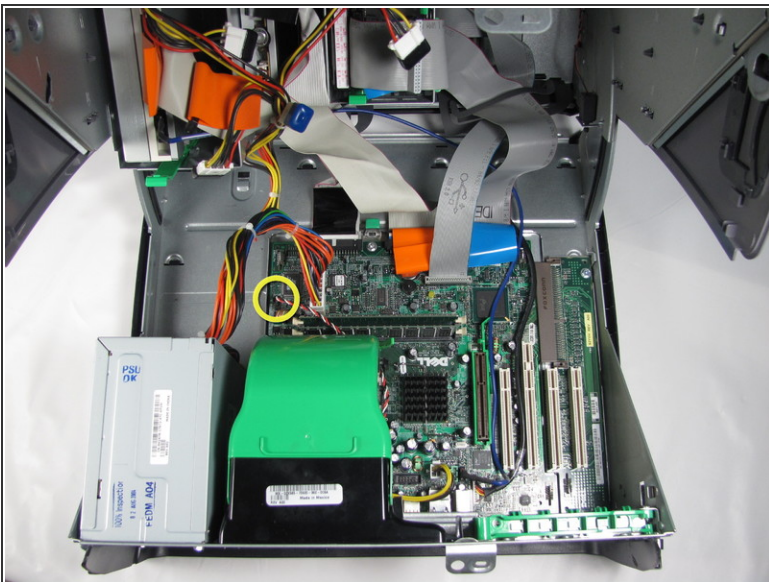

- Disconnect the fan cable from the motherboard.




## Step 3

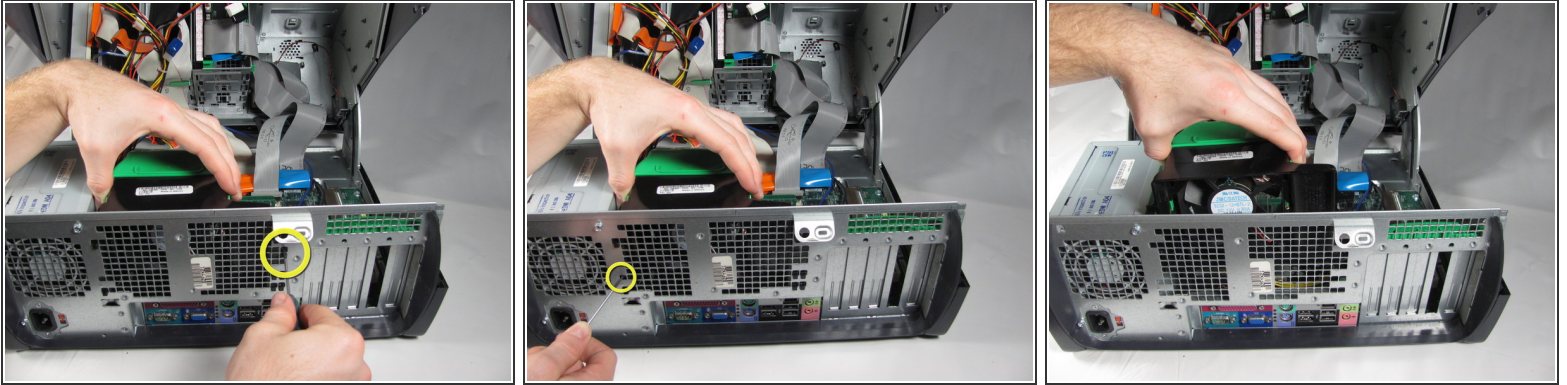

- On the rear of the desktop, push the two circled black buttons straight in with a small pointed object while pulling up on the fan.
- Once the fan is released, lift it straight up and out of the case.



## Step 4 — RAM

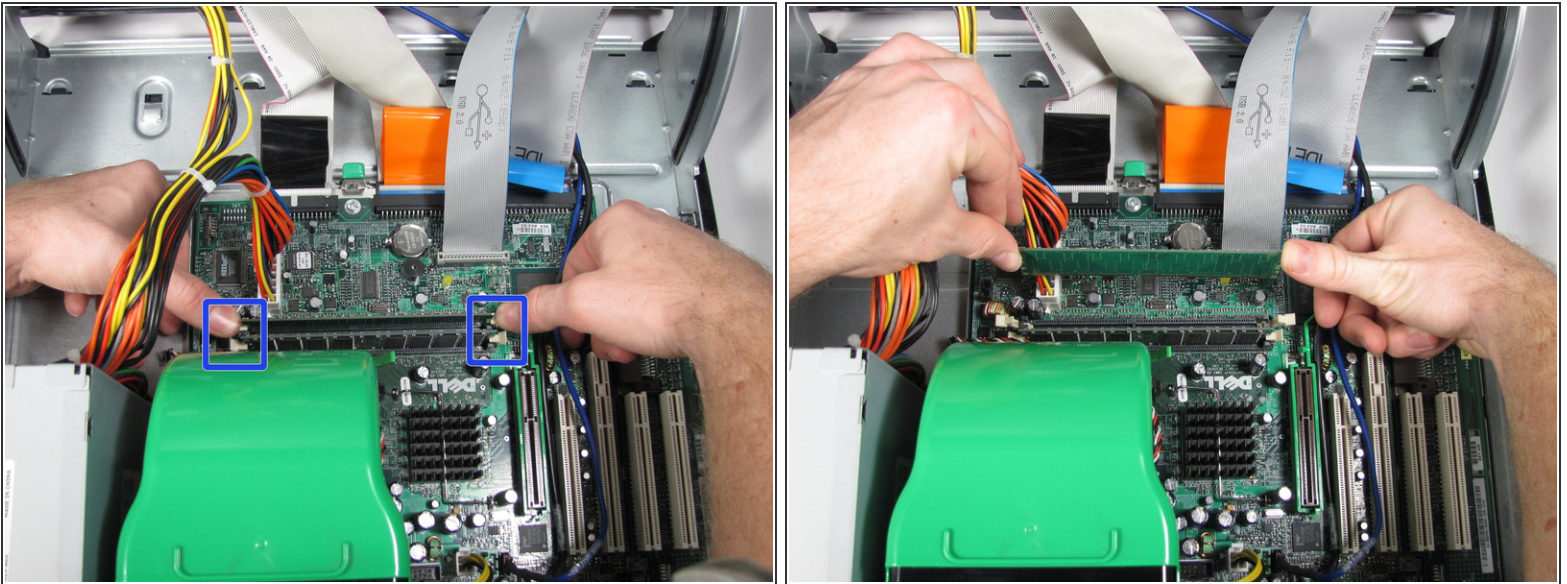

- Push out on the cream colored tabs on each side of each RAM module until it pops up and out of its slot and remove the RAM.






## Step 5 — Motherboard

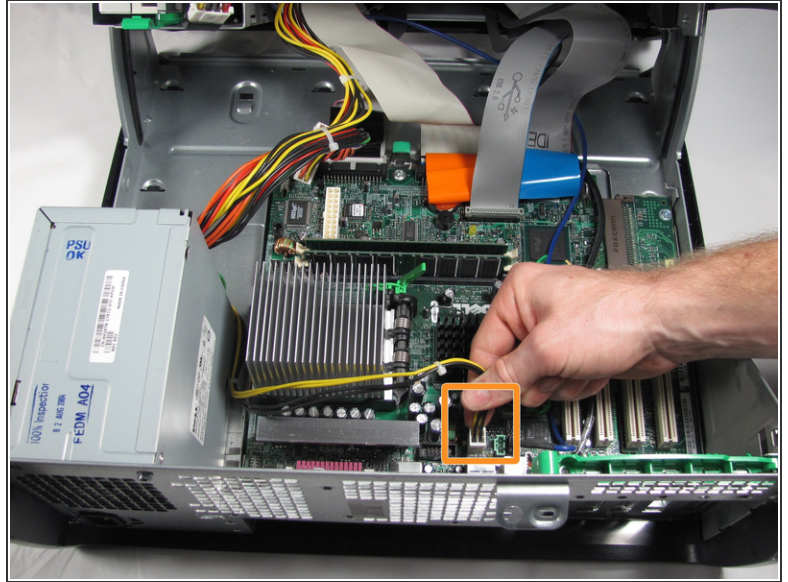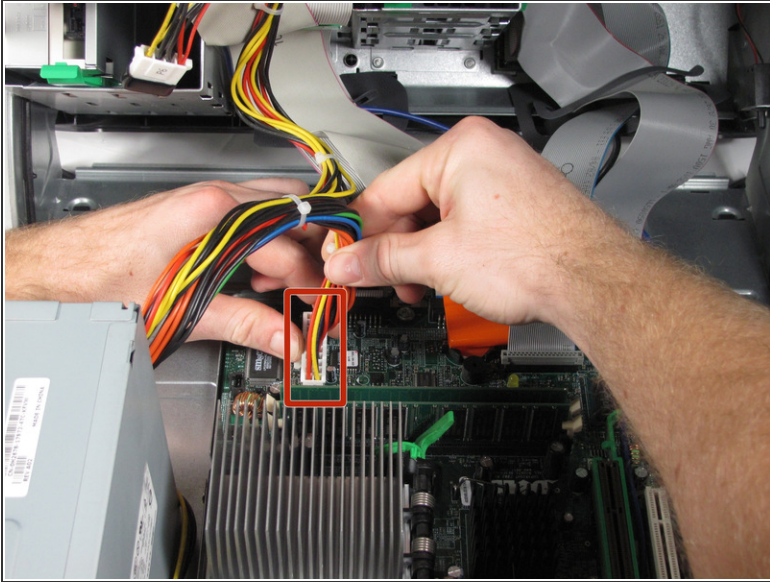



- Disconnect the ATX power cable to the motherboard.
- Disconnect the P4 12V(4x2) power cable from the motherboard.

## Step 6

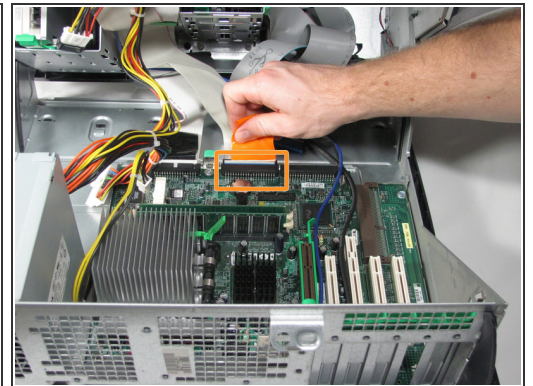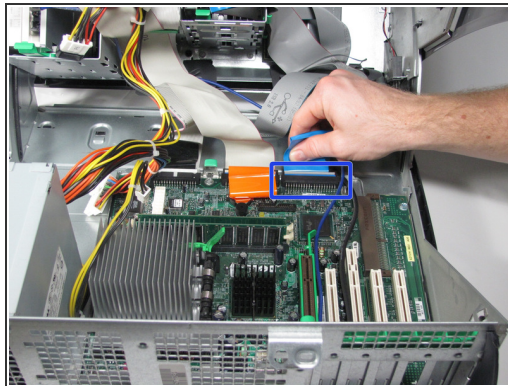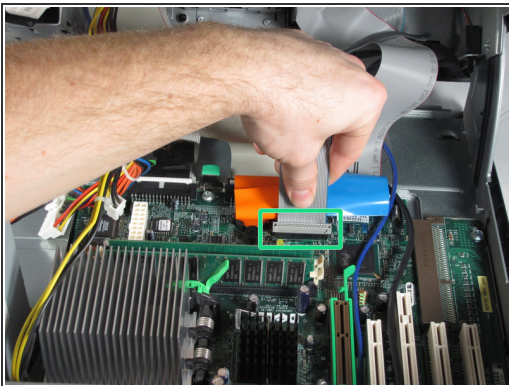

- Disconnect the front panel ribbon cable by gently pulling it straight up.
- Disconnect the hard drive ribbon cable by gently pulling the blue tab away from the motherboard.
- Disconnect the optical drive ribbon cable by gently pulling the orange tab away from the motherboard.



## Step 7

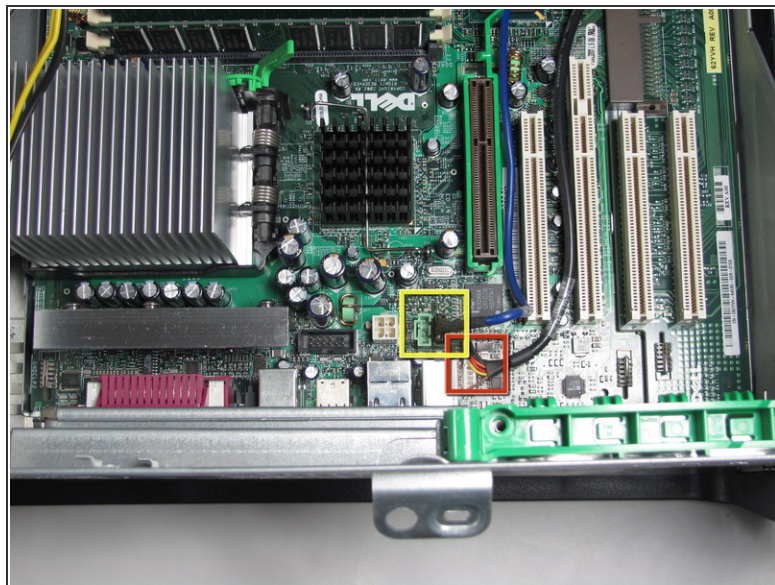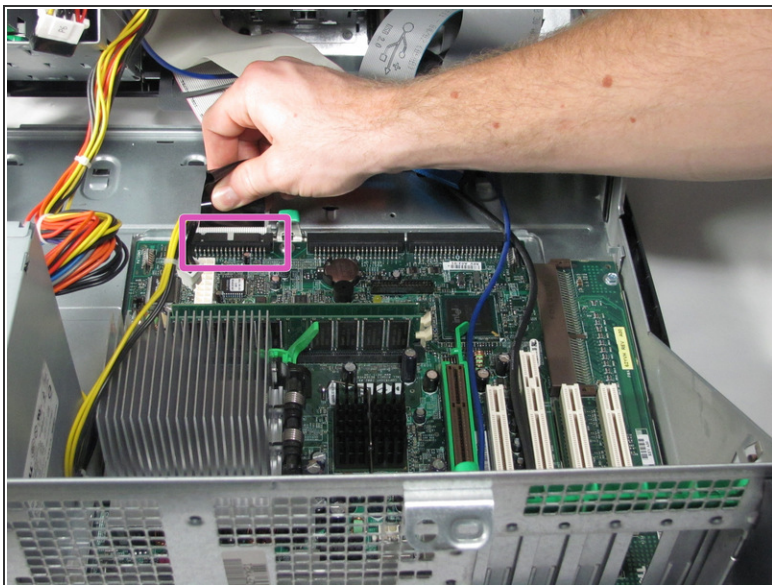

- Disconnect the floppy drive drive ribbon cable by gently pulling the black tab away from the motherboard.
- Disconnect the optical drive audio cable connector from the motherboard.
- Disconnect the audio input/output cable from the motherboard.






## Step 8

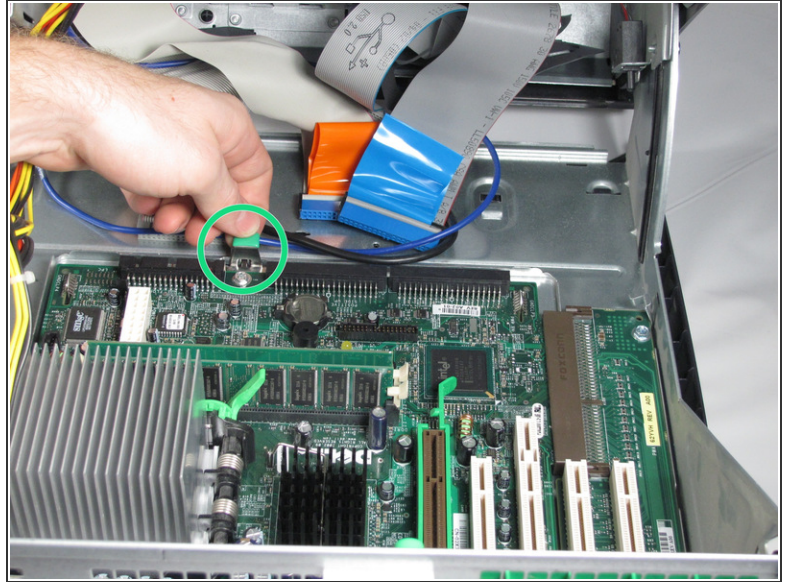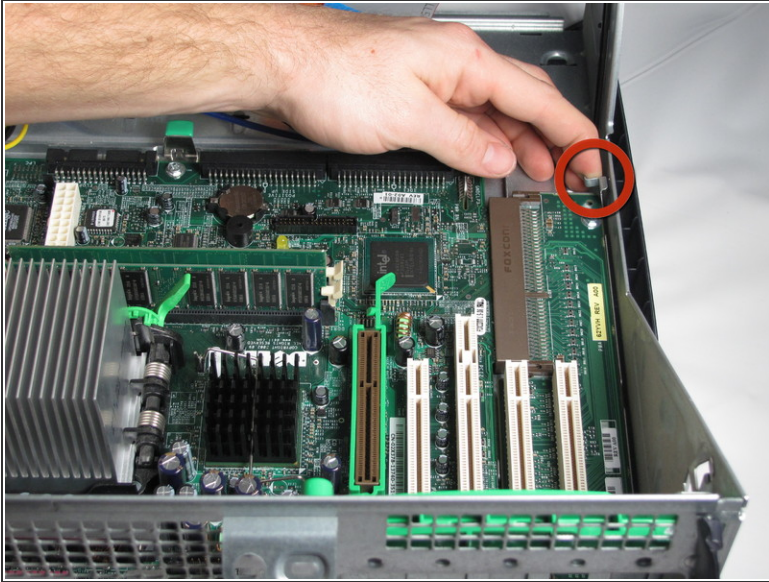




- Lift the metal tab near the right corner of the motherboard.
- Pull the green tab toward the front of the PC to release the motherboard.
- From the rear of the PC, push the ports in while lifting the motherboard up and flipping it away from you.

## Step 9

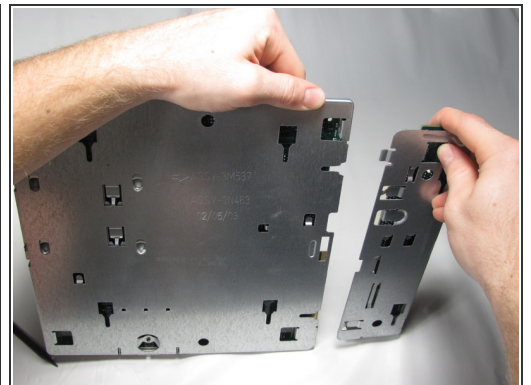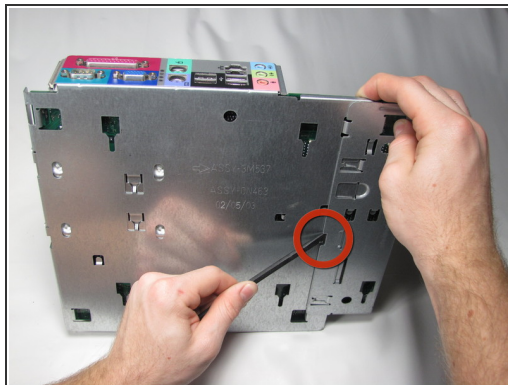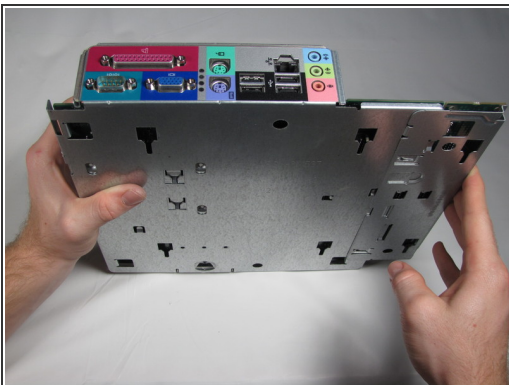

- Stand the motherboard up as shown.
- Insert the flat end of a spudger into the slot in the motherboard mounting plate and press the release tab while pushing the extension plate to the right with your thumbs until it comes off..

## Step 10

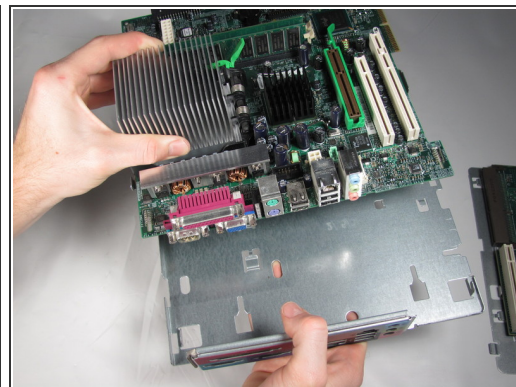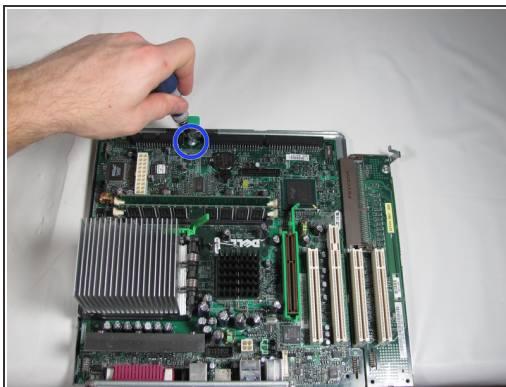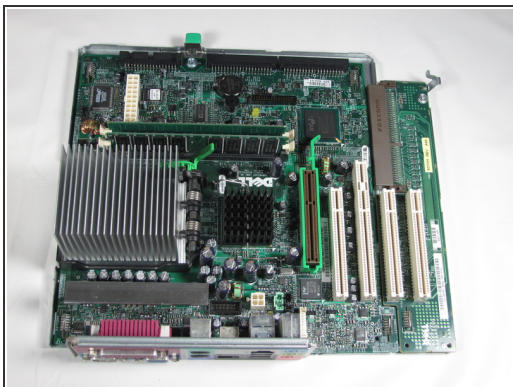

- Remove the screw at the rear of the motherboard.
  - Grasp the heat sink with your left hand and the I/O port panel with your right hand and pull to separate motherboard from the metal base.
- ⓘ If you are replacing the motherboard refer to the great [iFixit guide for removing the CPU](#).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 12:12:56 PM.